

User Manual

Welcome.....	1
Chapter I Beginning Use.....	2
1.1 Appearance.....	2
1.2 Power Supply & Charging.....	2
1.3 Basic Use.....	3
1.4 System Main Interface and Major Functions.....	5
Chapter II Navigation.....	7
2.1 Instruction.....	7
2.2 Operation.....	8
2.3 The Player of DVR.....	10
Chapter III Function Operation.....	12
3.1 Music Player.....	12
3.2 Video Player.....	15
3.3 Photo Browser.....	17
3.4 E-book reader.....	19
3.5 Flash Play.....	23
3.6 Theme.....	24
3.7 Wallpaper.....	25
3.8 Favorites.....	26
3.9 Explorer.....	27
3.10 Calendar.....	28
3.11 Bluetooth.....	29
3.12 System Resource.....	40
3.13 Calculator.....	40
3.14 Unit.....	41
3.15 GPS Info.....	41
3.16 FM Transmitter.....	42
3.17 Volume.....	43
3.18 Backlight.....	44
3.19 Language.....	45
3.20 Date & Time.....	45
3.21 Calibration.....	46
3.22 Restore Factory Setting.....	47
3.23 USB setting.....	47
3.24 System Info.....	49
3.25 Navigation Path.....	50
3.26 Othello.....	50
3.27 BoxMan.....	50
3.28 Russia Block.....	51
Appendix Troubleshooting.....	52

Welcome

Thanks for using GPS . It is featured with navigation function, Bluetooth, audio & video play, photo browsing and e-book functions.

- ✓ SIRF Atlas-V CPU with high performance and low power consumption
- ✓ Friendly user interface for simple operation
- ✓ Power management for longer and more stable operation
- ✓ Data transmission with computer via Mini USB
- ✓ Quality reception, accurate positioning and satisfactory navigation service
- ✓ Leisure friend with audio/video/amusement functions

You may use the GPS navigator anytime anywhere, for example while driving, walking or cycling. Let its navigation and amusement functions enrich your life and work!

To realize the functions of GPS PF11-5001 and to understand the operation details, please read the manual carefully.

You may see the following supplemental information in the manual.

[Note]: Explanation of relevant subjects

[Relevant Information]: Extra information of relevant subjects

[Attention]: Precautions or warnings of relevant subjects. Please pay attention to this information and follow the instructions to avoid devastating influence on yourself and others.

["]: Optional function

This manual is applicable only to the GPS PF11-5001.

Chapter I Beginning Use

This chapter introduces the basic operations of GPS PF11-5001.

1.1 Appearance

The product picture below is subject to the material object.



1. Lock Key	6. VIDEO-IN Port	
2. Power key	7. MINI USB Port	
3. T-Flash slot for DVR only	8. Indicator light	
4. Earphone Port	9. Microphone	
5. T-Flash Port	10. Reset key	

1.2 Power Supply & Charging

Charge the GPS navigator fully with the charger before first use.

1.2.1 Power Supply

The GPS PF08 can be powered by the built-in battery or external power supply.

When the GPS navigator is unconnected to the charger, it is powered by the Li-polymer battery.

The battery capacity icon in the system main interface shows current residual battery capacity.

When the GPS navigator is connected to the charger, it is powered by external power and the battery is charged.

[Attention] The GPS navigator adopts internal non-removable Li-polymer battery. To avoid battery rupture, explosion, release of hazardous substance or burn, do not unpack, pierce, strike on or discard the battery in fire or water.

1.2.2 Charging by DC Charger

The GPS navigator must be charged with the DC charger before first use.

Plug the USB terminal of the DC charger into the USB port of the GPS navigator and the other to the power socket to supply power and charge the GPS navigator.

[Note] The charging indicator light is red during charging. Do not unplug the charge until the battery is fully charged and the indicator light turns green. Please charge the GPS navigator when the battery is low or used up.

1.2.3 Charging by Car Charger

Plug one terminal of the car charger into the USB port of the GPS navigator and the other to the charging port to supply power and charge the GPS navigator.

[Note] To avoid damage due to current surge, plug in the car charger after the automobile is started.

1.3 Basic Use

1.3.1 Powering on/off & Sleep

 
1.3.1.1 Powering on

Press the power key of the GPS navigator and let go after at least two seconds to power it on.

[Note] Great humidity fluctuation may lead to short circuit of the GPS navigator. Power on the navigator after it has accommodated to new environment.

1.3.1.2. Powering off & Sleep

Press the power key and let go after at least two seconds to power off the GPS navigator. The following interface will be prompted. If **Sleep** is selected, the navigator will automatically resume the state before entering sleep mode when it is powered again.

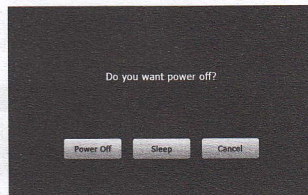

1.3.2 Restarting the System

When the system does not response, press the reset key on the back of the GPS navigator to restart the system.

[Relevant Information] The following situations might lead to no response of the system.

1. Delay or pause in interface switching;
2. Failure of function activation with overlong execution;
3. Failure to power on/off the GPS navigator by pressing the power key.

[Note] Restarting the system by pressing the reset key will result in loss of unsaved data. Please backup your data regularly.

1.3.3 Fixing the GPS Navigator with Mounting Kit

The mounting kit is composed of a back splint and a bracket. To use the GPS navigator in an automobile,

fix it on the dashboard under the front windshield.

[Note] Do not place the GPS navigator in positions obstructing the driver's vision. Do not place it without fixing it or in the place of air bag or the area after the air bag is inflated.

1.3.4 Using T-FLASH Card

 
Copy mapping applications, map data and media files in a T-FLASH card. Insert the card in the corresponding slot.


[Note]

1. Do not take out the T-FLASH card while a navigation program is being run or a media file is being played.
2. To avoid drop or crash of the T-FLASH card, do not exert heavy pressure on it or bend it.
3. Avoid using or storing the T-FLASH card in high temperature, high humidity or direct sunlight.
Keep the card away from liquid or corrosive substance.
4. Mind the direction while inserting the T-FLASH card to avoid damaging the slot or the card.

1.4 System Main Interface and Major Functions

Long press the power key on the top side of the GPS navigator to enter the system main interface shown below.

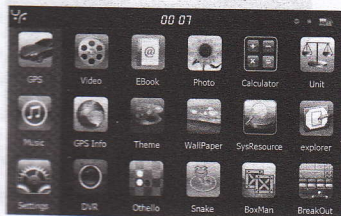

The icon  and **00 29** are shortcuts to view system information and set time & date for the device.


For details, please refer to relevant chapter and section.

[Relevant Information]: In the above interface, the icon style is set as "left", and the icons at the left remain during page scrolling. To change the style of icon layout, refer to 3.6 Theme.

[Relevant Information]: To rearrange icons at will, tap on an icon and stay until a four-way arrow appears at the upper left of it, and then drag the icon to a wanted place.

Function	Explanation
GPS	Tap to enable navigation function
DVR	Tap to enable DVR function
Bluetooth	Tap to enable Bluetooth function
Tool	Calculator, Unit, system information, favorite, calendar, GPS information
Media	JPG, GIF, BMP and PNG files supported; Photo rotation, zoom in/out and auto play supported
Setting	Volume, backlight, language, date & time, calibration, system info, FM Transmitter, USB setting and Factory reset
Game	Othello, DuiDuiPeng, Russia Block

Chapter II Navigation

Tap the icon  in the system main interface to start the navigation program. For detail usage, please refer to the electronic map instruction.

- Due to transportation development, inconformity between products and real traffic information will occur a period after product release. Please drive according to road condition and abide by traffic regulations.
- Navigation paths are for reference only, and the user may decide whether to follow them.
- High and crowded structures (such as inside of tunnels, space between high buildings, underground car parks and under viaducts), weather change or satellite signals turnoff may influence signal reception, resulting in positioning failure, inaccurate positioning, navigation failure or system function abnormality.

With stereoscopic maps, instant animation, voice prompt and text prompt of the navigation system, you will appreciate its unique charm and enjoy a great trip.

Function of DV recorder (Drive video record)


This section introduces the usage of the DVR.

2.1 Instruction






- 1、The function of DVR need match with TF card
- 2、Requirement of TF card is 4 grade; Capacity should be 4G at least.
- 3、Format the TF by special form at 1st time usage,, you can choose it under the format setting
- 4、The player of DVR will create automatically after formatted
- 5、There are 3 lock manner (hand-driven lock, top lock on device ,G-sensor lock) for DVR's video ,

2.2 Operation

2.2.1 Interface of DVR.

Tap the icon  in the system main interface to enter the **DVR** interface as follows:



	Turn No/off	Tap to start-up& turn off video
	Playback	Tap to player the recorded video
	Lock	Tap to lock the recording video (Avoid erased during the period of cycling video)
	Setting	Tap to setting / format the TF card/ setting startup method of video
	Return	Tap to quit the DVR interface(if you did not turn off video for quit, it will still run behind)

2.2.2 Setting interface of DVR

Tap the icon  in the DVR main interface to enter the setting interface as follows:



FORMAT SD:	Formatting	Tap "confirm" to Format the TF,
AUTO RUN:	Start video manner	Tap YES and Save, it will running behind automatically when power on /Tap NO and Save, it will running by manually to turn on video.
AUTO LIGHT:	Light	Tap ON to turn no the light Tap OFF to turn off
SAVE	Save	Tap to save current video
QUIT	Quit	Tap to Quit setting interface


2.2.3 Playback interface of DVR


Tap the icon  in the DVR main interface to enter the player interface as follows:



	Previous	Play the previous video
	Play/ Pause	Pause/continue playing
	Stop	Stop playing the current video
	Next	Play the previous video
	Lock	Tap to lock & unlock current video
	Return	Tap to return the main interface

2.3 The Player of DVR

 The Player will create automatically after formatted, this file  ADRPlayer11.exe will shown on the screen once open the TF card by computer, we can save picture, output the video file and map information, when double tap it,

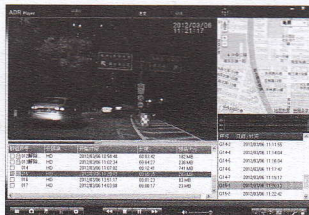


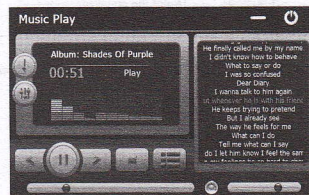 
Chapter III Function Operation

3.1 Music Player







The music player supports WMA9 and WAV files and also supports selection of play sequence.

To use the function, please first insert a flash card with music files inside.

 
1. Tap the music icon  in the system main interface to enter the **Music Play** interface as follows:







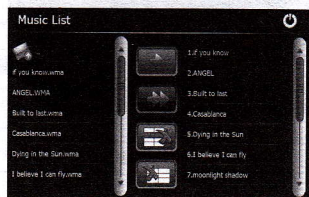

Icon	Name	Explanation
	Close	Close the music player.
	Minimize	Minimize the music player and return to the system main interface.
	Play	Continue playing the paused/ stopped music.
	Pause	Make the playing music pause.
	Stop	Stop playing the music.
	Set play sequence	Select sequence, random or cycle play.
	Previous	Play the previous music.


Icon	Name	Explanation
	Next	Play the next music.
	Volume regulation	Drag it leftward/ rightward to turn down/ up the volume.
	Progress regulation	Drag it leftward /rightward to play from a previous/future moment.
	Music list	Enter it to select music to play.
	Time	Display the run time.
	Equalizer	Enter the equalizer.


2. Tap  in the **Music Play** interface to enter the **Music list** as follows:





Icon	Name	Explanation
	Close	Close the Music List .
	Scroll bar	Drag it upward/ downward to view all music.
	Add one	Add a piece of music on the left list to the play list on the right.


Icon	Name	Explanation
	Add all	Add all the music on the left list to the play list on the right.
	Delete one	Select one piece of music in the play list and tap the icon to delete it.
	Delete all	Delete all the music in the play list.

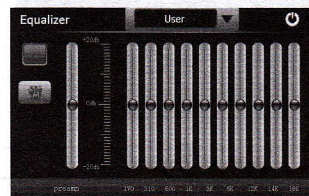 3 Tap  in the **Music Play** interface to enter the **Equalizer Setting** interface as follows:



Tap in  on the upper left of the above interface, and then tap  to select a music type or "User" from the drop-down menu.

The music types include Pop, Rock, Metal, Dance, Electronic, Country, Jazz, Oldies, Blues, Nostalgia, Opera and speech. If "User" is selected, you may drag the slider at will to set the equalizer. After setting,


tap  to save and return to the **Music Play** interface.

Note: If your memory card contains corresponding lyric files for the music being played, lyrics will be displayed in the lyric window right at the **Music Play** interface. Double tap the lyrics window to view the lyrics in full screen. Under full screen mode, double tap the screen to return to normal-sized interface.









3.2 Video Player

The video player supports WMV, ASF and AVI files, full-screen play, progress selection and file selection.

To use the function, please first insert a flash card with video files inside.




1. Tap  in the system main interface to enter the video player interface as follows:



Icon	Name	Explanation
	Close	Close the video player.
	Previous video	Play the previous video.
	Play	Continue playing the paused/ stopped video file.
	Next video	Play the next video.
	Stop	Stop the video
	Video folder	Enter it to select a video to play.
	Progress regulation	Drag the sliding block leftward to play from a previous moment or rightward for a coming moment.
	Volume regulation	Drag it leftward /rightward to turn down / up the volume.
00:00:24/00:03:52	Time	Display the play time and the video duration.

2. Tap  in the **Video Player** interface to enter the video folder as follows:




Icon	Name	Explanation
	Close	Close the video folder.
	Scroll bar	Drag the sliding block upward/ downward to view all the files under the folder.
	Video name& format	Video name and its format

Select a video file from the above video folder interface and then tap on it to start playing.

3.3 Photo Browser

The photo browser supports JPG, GIF, BMP and PNG files, photo rotation, zoom in/ and auto play.

 
To use the function, please first insert a flash card with photos inside.

1. Tap the photo icon  in the system main interface to enter the photo browser interface as follows.




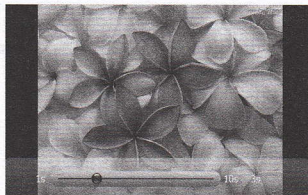 
Icon	Name	Explanation
	Previous	View the preview photo in the folder.
	Next	View the next photo in the folder.
	Zoom in	Scale up current photo.
	Zoom out	Scale down current photo.
	Rotate	Rotate current photo 90° clockwise.
	Auto play	Cycle play all the photos in the folder from current photo.
	Folder	Enter the photo folder to select a photo.
	Close	Close the browser and return to the system main interface.

2. Tap  in the browser interface to enter the photo folder as follows:

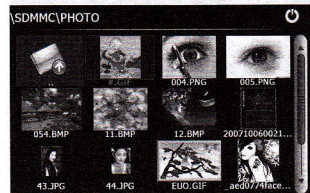

Icon	Name	Explanation
	Close	Close the current folder.
	Return	Return to the previous folder.
	Scroll bar	Drag the sliding block to view all the photos.


3. Tap  to enter auto play interface as shown below. Drag the slider at the bottom of the screen to regulate play speed (1-10 seconds), and then tap on the screen to hide the slide (or the slide will be hidden automatically); tap on the screen to show the slide. Double tap on the screen to stop playing and return to the browsing interface.

 




3.4 E-book reader





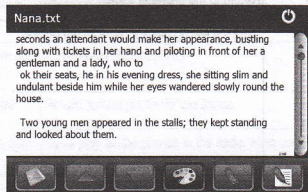


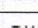
The reader supports text files in .txt format, page turn and folder selection.

To use the function, please first insert a flash card with text files inside.

1. Tap the e-book icon  in the system main interface to enter the reader interface as follows.




Icon	Name	Explanation
	Text name& format	Current file name and format
	Close	Close the reader.

Icon	Name	Explanation
	Scroll bar	Drag the sliding block upward/ downward to view all content of the e-book.
	Folder	Enter the e-book folder to select an e-book to read.
	Previous	Read the previous page.
	Next	Read the next page.
	Setting	Select a text theme, font, word size and bold type.
	New bookmark	Select partial text and tap the icon to create a bookmark.
	Bookmark list	Enter the bookmark list to select or delete a bookmark.
	Page/ total pages	Current page/ total pages

 
2. In the reader interface, double tap the screen to enter to the full screen reading mode as follows:






iiiiHarry Potter and the Half-Blood Prince
 iiiiiPage 1
 iiiiiPage 2
 iiiiiTable of Contents:
 iiiii1. The Other Minister
 iiiii2. Spinner's End
 iiiii3. Will and Won't
 iiiii4. Horace Slughorn
 iiiii5. The Excess of Phlegm
 iiiii6. Draco's Detour
 iiiii7. The Slug Club
 iiiii8. Snape Victorious
 iiiii9. The Half-Blood Prince
 iiiii10. The Hour of Gaunt
 iiiii11. Hermione's Helping Hand

In the full mode reading interface, tap the upper part of the page to read the previous page, while tap

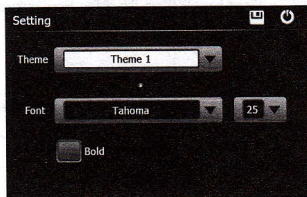
on the lower part of the page to read the next page; tap  to quit.





 3. Tap  in the e-book reader interface to enter the setting interface as follows:



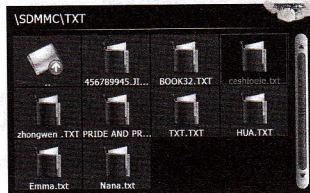


Icon	Name	Explanation
	Close	Exit the setting interface.
	Save	Save the settings.
Theme	Theme	Tap  to select a theme for the e-book.
Font	Font	Tap  to select a font for the e-book.
	Bold	Tap to enable bold type. Tap it again to cancel.


4. Tap  in the e-book reader interface to enter the e-book folder as follows.




Icon	Name	Explanation
	Close	Close current folder
	Return	Return to the previous folder.
	Scroll bar	Drag the sliding block upward/ downward to view all text files.
	File name& format	The file name and its format.


5. To create a bookmark, locate a page by taping  or  or dragging the scroll bar in the reader interface and drag to select the text content.

 
Tap  when it is on and a dialog will popup as follows:

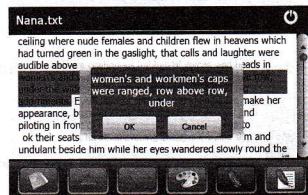

Tap "OK" to finish creating a bookmark or tap "Cancel" to quit the dialog.

 6. Tap  to view created bookmarks in the interface of **Bookmark List** as shown below.

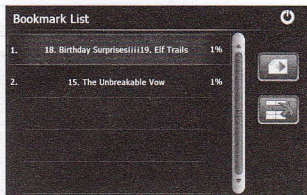

Drag the scroll bar and select a bookmark on the left list. Tap  to go to the page with the

bookmark or tap  to delete the bookmark.


3.5 Flash Play

 
The flash player supports .swf files, full-screen play, progress adjustment and file select.



To use the function, please first insert a flash card with video files inside.


Tap the icon  in the system main interface to enter the flash play interface. For detailed operation, refer to **3.2 Video Player**.

3.6 Theme

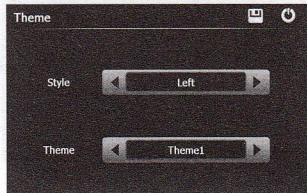Tap the Theme icon  to enter the following interface to set a style and theme for the system interface:



 
Tap  to select a mode (from "Empty", "Left" or "Bottom") or a theme (5 kinds of themes in total), and tap  to save the setting.

For example, set the Mode as "Bottom" and the Theme as "3", and tap  to get the following system interface effect.




3.7 Wallpaper

Tap the Wallpaper icon  to enter the following interface:

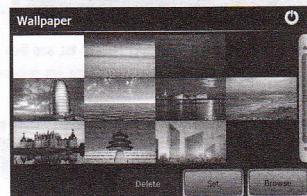


1. Set wallpaper with built-in wallpaper:

Select built-in wallpaper from the above interface, and tap  to get the following effect.



2. Set wallpaper with external image:

 Insert a T-flash card with images inside into the device, and tap "Browse" to select an image as follows:

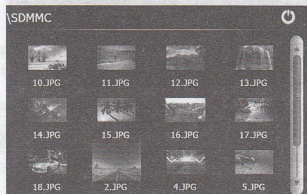


Double tap on an image to add it to the "Wallpaper Setting" list, and then select the image and tap **Set** to set it as the wallpaper.


[Note]: The built-in wallpapers cannot be deleted, while the added images can be deleted. To delete images, select an added image from the "Wallpaper Setting" interface and then tap **Delete**.

3.8 Favorites

 Tap **Favorites** in the system main interface to enter the **Favorite** interface as shown below.

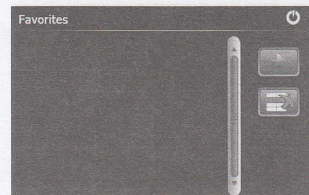

 Tap **Navitel** in the above interface to open the directory where the application to be added is, and then double tap the application to add it to the Favorite.

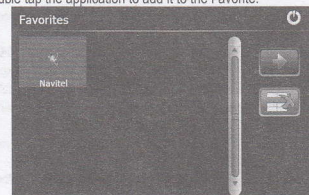


To delete applications from the Favorite, select the application in the above interface and tap **Delete**.


[Note]: While deleting the application, the shortcuts instead of application itself will be deleted.

3.9 Explorer

 Tap the icon **explorer** in the system main interface to popup the following dialog box indicating whether to enter the WINCE system:

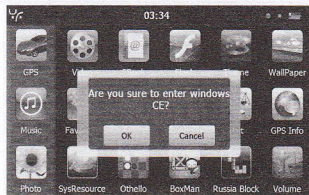

 Tap [OK] to enter the WINCE system as shown below while tap [Cancel] to return to the system main interface.

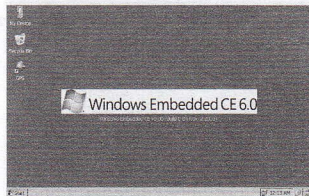


In the above interface, double tap the icon "GPS" and select "Yes" in the dialog box popped up to return to the GPS main interface.

Note: push the Reset button at the left side of the navigator can also exit Explorer and restart up the system.

3.10 Calendar

 Tap the icon **20** in the system main interface to enter the Calendar setting interface as below

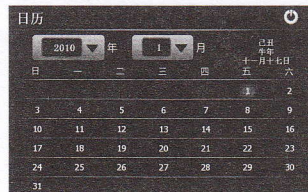



If you want re-set the date and need enter into interface of setting→Date & Time for update

(For detail please reference point 3.20 Date& Time

3.11 Bluetooth

This function realizes wireless connection between the GPS navigator and a Bluetooth mobile phone for making and answering calls. Before using this function, make sure that Bluetooth function of the cell phone has been enabled.

Tap the Bluetooth icon  in the system main interface to enter the Bluetooth Interface as follows.

 
To quit the interface, tap the icon .



1) Pair

Pair the navigator and a mobile phone while setting up connection between them for the first time.


Tap  in the Bluetooth interface to enter the following interface.

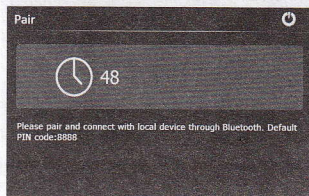




Meanwhile, press the icon "Search audio device" or similar one on the mobile phone. After the mobile phone finds and display the name of the navigator (i.e. PND), tap "Connect" and input the default PIN code: 8888. After pairing, the connection situation and mobile phone name will be displayed on the bottom of the Bluetooth interface as follows.




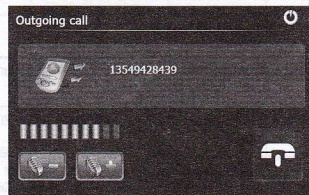 
2) Make Phone Calls


Tap  on the Bluetooth interface to enter the keypad interface as follows.





Icon	Name	Explanation
	Backspace	Delete the last input number or sign
	Dial	Dial the input number
	Call records	Check the answered call records, outgoing call records and missed call records

To make a call, input the number to call and tap  as shown below.










Icon	Name	Explanation
	Volume down	Reduce the volume


Icon	Name	Explanation
	Volume up	Increase the volume
	Hang off	End the call

After the call is put through, the following interface will be displayed.




Icon	Name	Explanation
	Volume down	Reduce the volume
	Volume up	Increase the volume
	Keypad	Open the keypad as shown in the following interface
	Microphone	Tap to stop audio input, and tap it again to resume audio input.
	Voice switch	Tap to switch the voice from the navigator to the mobile phone; to switch the voice back to the navigator, you may tap the "hands free" or similar icon on the mobile phone.
	Hang off	Hang off the call





To input numbers or other content during a call, tap  in the above interface to

 display the keypad. To hide the keypad, tap the icon  again.

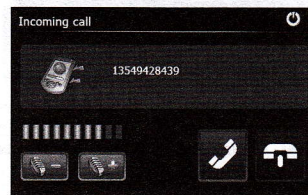
3) Answer Phone Calls

When there is an incoming call, the following interface will be displayed.





Icon	Name	Explanation
	Volume down	Reduce the volume
	Volume up	Increase the volume
	Answer	Answer the call
	Reject	Reject the incoming call

4) Dial Records

Tap  in the Bluetooth interface to enter the call records interface as shown below.




Input a new PIN code, tap  to return to the setting interface and tap

 to finish. To cancel the modification, tap  to return to the setting interface and tap it again to quit.

7) Paired Device List



In the Bluetooth interface, tap the icon  to enter the Paired Device List interface as follows.




Icon	Name	Explanation
	Profile list	Select a paired device from the list on the left and tap this icon to view the profile list as shown in the following interface.
	Delete one	Select a paired device and tap this icon to delete the device.
	Disconnect	Select a paired device and tap this icon to disconnect the navigator from the device.



Select a profile from the list, and then:

	Connect	Tap it to reconnect the PND with the mobile phone.
	Disconnect	Tap it to disconnect the PND from the mobile phone.

 
In the above interface, tap  to prompt the GPRS Dial-up Networking interface as shown below.




◆ Tap  to prompt the following interface.



Select an option, for example "Modify Info", and tap "OK" to go to the interface as shown below.

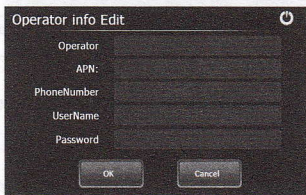


Tap in a column, enter information with the prompted input panel and then tap "OK" to save the input information or tap "Cancel" to quit.

◆ Tap  to connect the navigator to the network. After connection is established, the Internet Explorer interface will prompt as follows.



8) Search Bluetooth Device




Tap  in the Bluetooth interface to enter the Search Bluetooth Device interface for auto Bluetooth device search and display as shown below.







Icon	Name	Explanation
	Search/Stop	search for Bluetooth devices; tap it again to stop search
	Pair	After selecting a Bluetooth device, tap the icon to pair the navigator and the mobile phone. The default PIN code "8888" Shall be input. After connection, the Profile List of the device will be displayed. Refer to Pair Device List .
	Pair device list	Tap to enter the Pair device list. Refer to Pair Device List .

 9) Phonebook

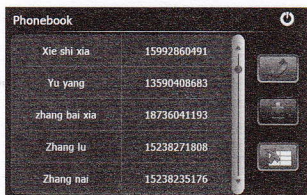


Tap  to enter the phonebook interface as follows.



	Download	Download the phonebook of the mobile phone to the PND.
	Dial	Select a number from the phonebook and tap this icon to generate a call.
	Delete	Select a number from the phonebook and tap this icon to delete it.

3.12 System Resource



Tap the icon  in the system main interface to enter the following interface:

 


You may check the capacity of the memory, SD card and flash, or tap **Clear Memory** to clear the memory.

3.13 Calculator




Tap **Calculator** in the system main interface to enter the calculator interface as follows:

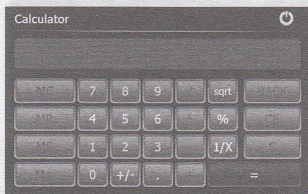

3.14 Unit



  
Tap **Unit** in the system main interface to enter the unit converter interface as follows:

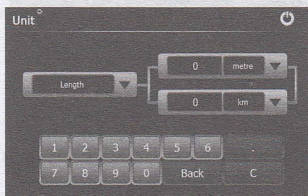


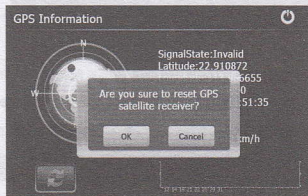 
3.15 GPS Info



Tap **GPS Info** in the system main interface to view the GPS information as shown below.

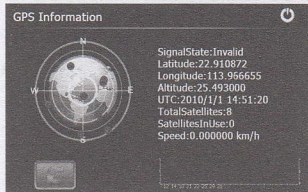

To reset the GPS satellite receiver, tap  to prompt a dialog as below.

 





Tap **OK** to reset the GPS satellite or tap **Cancel** to exit.

3.16 FM Transmitter

The FM Transmitter enables you to output the sounds of the PND via the amplifier of your radio device.

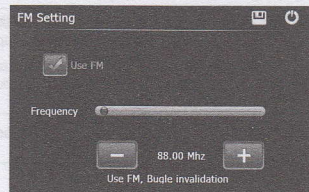
In the system main interface, tap the icon  to enter FM Transmitter interface as follows.

 




Select a frequency by dragging the slide in  (or by tapping  / ) that is the same as the receiving frequency of your radio device.


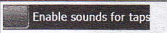



Tick in the box  to enable your setting.

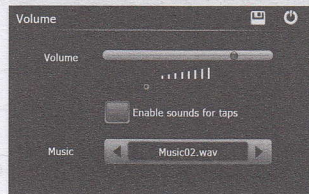3.17 Volume

Tap  in the system main interface to enter the volume setting interface as shown below.




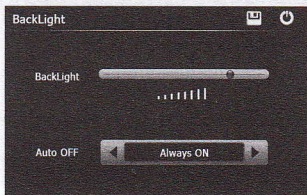 
	Close	Exit the volume setting.
	Save	Tap to save the settings







	Volume	Ten volume grades (from mute to maximum) available. Tap to decrease the volume by grade.
	Sounds for taps	Tap it to enable the function. Tap it again to disable the function.
	Power-on music	Tap  or  to select power-on music or disable it.

3.18 Backlight

Backlight setting includes backlight brightness adjustment and latency of backlight off.


Tap  in the system main interface to enter the backlight setting interface as follows.







	Close	Exit the backlight setting.
	Save	Tap to save the settings
	Backlight	Drag leftward to turn down or rightward to turn up the backlight.
	Auto off	Auto backlight shutoff after service stop for a period. The options are always On, 10s, 30s, 1m, 2m and 3m. Tap  or  to view the options in cycle or select one.

 3.19 Language

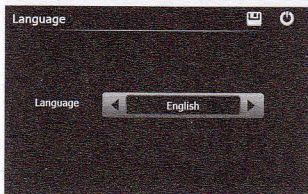


Tap  in the system main interface to enter the language setting interface as follows.



 
Tap  or  to select a system language and tap  to save the selection.

3.20 Date & Time





Tap  in the system main interface to enter the Date & Time setting interface as follows.

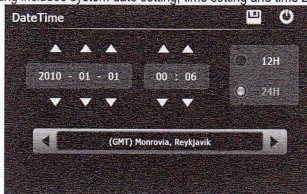Date & Time setting includes system date setting, time setting and time zone setting.




◆ Setting the system date and time

 
In the above interface, tap  or  to set the year, month, day, hour and minute.
[Note]: Time format options are 12-hour and 24-hour. You may select one of them.

◆ Setting the system time zone

In the above interface, tap  or  to select a time zone.

 
3.21 Calibration

Tap  in the system main interface to prompt the calibration dialog as follows.

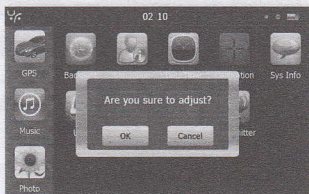


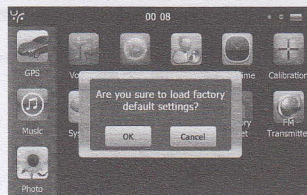 
Tap **OK** to execute calibration or **Cancel** to cancel calibration and go back to the system main interface.

Tap **OK**, and the following calibration interface is prompted. Click the center of cross cursor with the touch pen and the cursor shifts from the center, upper left, lower left, upper right and lower right to finish the calibration and the interface will be closed automatically to go back to the system main interface.

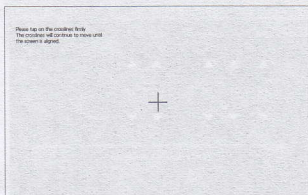

3.22 Restore Factory Setting

Tap  in the system main interface to restore the factory setting. The following dialog will be prompted.




Tap **OK** to restore the default setting or **Cancel** to return to the system main interface.

3.23 USB setting


Connect the GPS navigator to PC via the MINI USB port to transmit data, or back up data from the navigator data to PC.

The GPS navigator provides MASS STORAGE and MS STORAGE modes. Select one in the USB setting.

◆ MASS STORAGE

1. Have the GPS navigator in operation status and the SD card plugged in the slot;
2. Tap  in the system main interface to enter **USB Option** as follows.



Select **MASS STORAGE** and tap  to save it.


3. Connect the MINI USB terminal of the USB cord to the MINI USB port of the GPS navigator and the standard USB terminal to the USB Host port of PC. Then, the computer will recognize the navigator and prompt the following interface.



To disconnect the navigator from PC and enter charging mode, you may tap .
4. After communication, unplug the MINI USB cable.

◆ MS ACTIVESYNC



1. Tap  in the system main interface to enter **USB Option** interface. Select **MASS**

ACTIVESYNC and tap  to save the setting.

2. Install the application **Mobile Device** in a drive of PC. Then the following icon will appear in the drive selection.



Mobile Device

3. Connect the MINI USB terminal of the USB cable to the MINI USB port of the GPS navigator and the standard USB terminal to the USB Host port of PC.

4. After the PC finds new hardware, double click the Mobile Device drive in the selection area to enter the memory of GPS navigator for data transmission.

5. After transmission, unplug the USB cable.

[Attention] For data safety, please back up your system data in external storage. Our company has no responsibility for lost or damage of system data.


[Note] If MASS STORAGE is selected while the GPS navigator is connected with PC, other operations will be suspended.

[Attention] The following operations will stop suspend the communication of the system and PC and unsaved data will be lost.

1. Unplugging the MINI USB cable;
2. Powering off the GPS navigator;
3. Resetting the system;
4. Tap the on close button on the top right.

3.24 System Info



 
Tap  in the system main interface to view the system information as follows.




The system information interface display information on hardware version, software version, platform identity, device identity and SD card identity.

3.25 Navigation Path

Tap the "Nav Path" icon and enter into the following display interface:

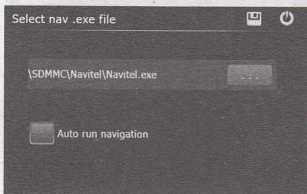


- 1) Select the Auto Run Navigation, the device will run the Navigation software automatically when tapping the GPS icon on the main menu.
- 2) Tap  to select to run the navigation.exe files manually.

 3.26 Othello




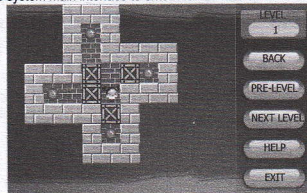 
Tap  in the system main interface to enter the interface as follows.

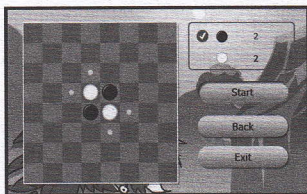

3.27 BoxMan



Tap  in the system main interface to enter the interface as follows.



Appendix Troubleshooting

Please carry out the following operations in case of abnormal operation of the GPS navigator. For further problems, please contact our customer service center.

Fault	Reason	Solution
Startup failure	Low battery	Supply external power and charge the battery.
	System down	Reset the GPS navigator.
Sudden power cut	Low battery	Supply external power and charge the battery.
No/ vague display	Low backlight	Turn up the backlight.
	Backlight off	Tap the screen with the touch pen.
Incorrect tapping response	Touch screen not calibrated	Recalibrate the screen.
No sounds	Low volume	Turn up the volume.
	Poor contact of earphone	Connect the earphone.
Communication with PC	Poor USB connection	Connect the USB cable.
GPS signals reception failure	Weak GPS satellite signal	About 3 minutes are needed for low intensity of local GPS satellite signal.
Loss of map data	Accidental deletion	Contact your agent or distributor. Input a new password after recovering the GPS data.